

Daystar PARTS LIST (Distributor)2007-2008

PART	PART NAME <Radiation/Combustion Chamber>	CODE NO.	Q'TY /SET	PH5				REMARKS
DS-R-1	FRONT GUARD	503171 01004	1	•				
DS-R-2	DRUM FRONT RING	503192 01002	1	•				Black color
DS-R-3	RADIATION DISK	503172 01002	1	•				
DS-R-4	INSULATOR	50317 201004	1	•				
DS-R-5	INNER DRUM	50317 101003	1	•				
DA-R-6	INNER DRUM PLATE	50310 201012	1	•				
DA-R-7	MAIN DRUM	50317 201001	1	•				Yellow untill 2005
DA-R-7A		50317 201008	1	•				
DS-R-8	OUTER DRUM PLATE	50310 201008	1	•				
DS-R-9	MAIN PLATE	50317 201003	1	•				Black color
DS-R-10	GRIP	50310 201022	1	•				
DS-R-11	BURNER INNER GASKET	50310 201021	1	•				untill 2005
DS-R-11A	BURNER INNER GASKET	50317 201009	1	•				from 2006(PH1 :N-02) used for burner
DS-R-12	OVERHEAT PROTECTION	50229 202061	1	•				A80
DS-R-13	OVERHEAT PROTECTION CABLE	50310 201024	1	•				
DS-R-14	CABLE CLIP	50310 201025	1	•				
DS-R-15	BLOWER FAN	50310 201020	1	•				
DS-R-16	BLOWER MOTOR	50310 201019	1	•				
DS-R-17	RELAY CABLE	50310 202018	1	•				
DS-R-18	DRUM BASE	50319 101003	1	•				untill 2004 Yellow
DS-R-18A		50317 103009	1	•				from 2005,N-01

450610

PART NO.	PART NAME <Tank/Flame>	CODE NO.	Q'TY /SET	PH5				REMARKS
DS-T-1	FUEL TANK	50319 103002	1	•				including 3-2,3-3,3-7 till 2004
DS-T-1A		50317 103007	1	•				including 3-2,3-3,3-7 from 2005,N-01
DS-T-2	TANK CAP	50317 103003	1	•				
DS-T-3	TANK INLET FILTER	50263 203028	1	•				
DS-T-4	SUCTION PIPE ASSEMBLY	50310 103004	1	•				till 2005
DS-T-4A		50317 103011	1	•				from 2006(PH1:N-02)
DS-T-5	FLOAT SWITCH STOPPER	50238 203003	1	•				till 2005
DS-T-5A		50317 203013	1	•				from 2006(PH1:N-02)
DS-T-6	FILTER ELEMENT	50317 203004	1	•				15i
DS-T-7	FUEL GAUGE	50317 103002	1	•				
DS-T-8	STAND	50317 203007	1	•				from 2005,N-01
DS-T-9	RETURN TUBING	50317 203014	1	•				from 2006,N-02
DS-T-10	HOSE CLAMP	50319 202016	1	•				from 2006,N-02

450610

PART NO.	PART NAME <Burner/Control>	CODE NO.	Q'TY /SET	PH5				REMARKS
DS-B-1	BURNER BASE	50310 102003	1	•				till 2005
DS-B-1A		50317 102007	1	•				from 2006,J-01
DS-B-2	FREE GROMMET	50263 202010	1	•				
DS-B-3	BURNER NECK	50262 202001	1	•				
DS-B-4	PUMP NIPPLE	50204 201025	2	•				1 pc from 2006,N-02
DS-B-5	NOZZLE	50317 202010	1	•				till 2005
DS-B-5A		50319 202013	1	•				from 2006(PH1:N-02)
DS-B-6	STATIONARY BLADE	50300 201007	1	•				
DS-B-7	ELECTRODE	50262 202010	1	•				till 2004 discontinued
DS-B-7A		50303 201010	1	•				for 2005,N-01
DS-B-7B		50319 202017	1	•				from 2006(PH1:N-02)
DS-B-8	BURNER FLANGE	50310 202004	1	•				
DS-B-9	BURNER CONE	50317 102005	1	•				till 2005
DS-B-9A		50319 102006	1	•				from 2006(PH1:N-02)
DS-B-10*	BURNER OUTER GASKET	50310 202014	1	•				till 2005
DS-B-10A	BURNER OUTER GASKET	50317 201009	2	•				from 2006(PH1:N-02)
DS-B-11	FACE PLATE	50317 102003	1	•				PH1 till 2006,N-03
DS-B-12	POWER SWITCH	50310 102005	1	•				till 2006(PH1:N-03)
DS-B-12A		50317 102006	1	•				from 2006,J-01 with terminals for thermostat
DS-B-13	TIP-OVER SWITCH	50298 202015	1	•				
DS-B-14	TIP-OVER SWITCH CABLE	50310 202017	1	•				
DS-B-15	STEPDOWN TRANSFORMER	50300 201005	1	•				
DS-B-16	FLAME MONITOR	50262 102008	1	•				PH1 till 2006,N-03
DS-B-17	BURNER CONTROLLER	50317 202002	1	•				till 2004
DS-B-17A		50310 202012	1	•				from 2005,N-01
DS-B-18	FUSE(3A)	50204 201061	1	•				till 2004
DS-B-18A	MIDGET FUSE (3A)	50310 202023	1	•				from 2005,N-01
DS-B-19	CONTROLLER SPACER	50229 201037	4	•				
DS-B-20	FAN MOTOR	50317 202011	1	•				
DS-B-21	IGNITION TRANSFORMER	50310 202011	1	•				till 2005
DS-B-21A		50317 202016	1	•				from 2006
DS-B-22	POWER CABLE	50317 202005	1	•				with 2-23A from 2006 J-01
DS-B-23A	CABLE STOPPER	50205 201017	1	•				(D) 230V:from 2006 J-01
DS-B-24	FUEL PUMP	50317 202001	1	•				till 2004
DS-B-24A		50317 202012	1	•				for 2005,N-01
DS-B-24B		50317 202015	1	•				from 2006,J-01 with 2-31
DS-B-25	FUEL OUTLET TUBING	50310 202010	1	•				till 2004
DS-B-25A		50317 202013	1	•				for 2005,N-01
DS-B-25B		50319 202014	1	•				PH1 230V from 2006,N-02 / PH5&PH1 110V from 2006,J-01
DS-B-26	BURNER COVER	50317 102004	1	•				
DS-B-29	RETURN TUBING	50319 202015	1	•				PH1 230V from 2006,N-02 / PH5&PH1 110V from 2006,J-01
DS-B-30	PUMP ELBOW	50217 202024	1	•				from 2006,N-02
DS-B-31	AIR VENT VALVE	21062 003-67	(1)	•				from 2006,N-02
DS-B-32	MAINTENANCE KIT							
VAL-MAT	SHIELDING MAT	50300 205001	1					

