

KBE1JA PARTS LIST (Distributor)

PART No.	PART NAME	CODE NO.	QTY /unit				REMARKS
	<Radiation/Combustion Chamber>						
JA - R - 1	RADIATION DISK	210220 001-1	1				
JA - R - 2	CONICAL INSULATOR	210220 001-2	1				
JA - R - 3	DRUM	210220 001-3	1				
JA - R - 4	CONICAL HOUSING	210220 001-4	1				
JA - R - 5	BURNER INNER FLANGE	210220 001-5	1				
JA - R - 6	VISOR	210220 001-6	1				
JA - R - 7	FRONT GUARD	210220 001-7	1				FOR SPARE PART ONLY
JA-R-7*							FOR NEW PRODUCT ONLY
JA-R-8	CONE SUPPORT	216501 00106	1				
JA-R-9	ANGLE ADJUSTMENT BOLT	502292 02074	1				
JA - R - 14	CAUTION LABEL PLATE	502982 03005	1				□not shown in drawing

PART No.	PART NAME	CODE NO.	Q ' T /unit				REMARKS
	<Tank/Flame>						
JA - T - 1	FUEL TANK	502781 02007	1				INCLUDE 2-2,2-3,2-4, 2-5 & 2-6
JA - T - 2	TANK CAP	502211 03003	1				
JA - T - 3	TANK FILTER	220110 002-8	1				
JA - T - 4	FUEL GAUGE	502601 02003	1				
JA - T - 5	DRAIN WASHER	502312 04021	1				M16
JA - T - 6	DRAIN BOLT	502312 04020	1				M16
JA - T - 7	SUCTION PIPE	502781 02004	1				
JA - T - 8	RETURN NIPPLE	502122 05004	1				
JA - T - 9	SUCTION WASHER	216501 00207	2				
JA - T - 10	FRAME (R)	502601 02005	1				
JA-T-10A		503091 02002	1				from 2006
JA - T - 11	FRAME (L)	502601 02006	1				
JA-T-11A		503091 02003	1				from 2006
JA - T - 12	H A N D L	502602 02009	1				
JA-T-12A		50309 202006	1				from 2006
JA - T - 13	HANDLE BRACKET (R)	502602 02010	1				
JA-T-13A		503092 02007	1				from 2006
JA - T - 14	HANDLE BRACKET (L)	502602 02011	1				
JA-T-14A		50309202008	1				from 2006
JA - T - 15	HANDLE RETAINING PIN	502602 02012	2				
JA-T-15A-1	HANDLE RETAINING PIN(L)	50309 202009	2				from 2006 Φ8x60
JA-T-15A-2	HANDLE RETAINING PIN(S)	50309 202010	2				from 2006 Φ8x38
JA-T-16	BURNER HOLDER	216501 00213	1				□□□□□□□□□□
JA - T - 17	FUEL HOSE	502202 03003	2				L=450mm
JA - T - 18	TANK LEG	502782 02002	1				
JA - T - 19	WHEEL AXLE FRAME	502781 02008	1				
JA - T - 20	WHEEL	502012 04006	2				
JA - T - 21	PIPE END CAP	50330 202009	2				from 2006

PART No.	PART NAME	CODE NO.	QTY /unit				REMARKS
	<Burner/Controll>						
JA - B - 1	NOZZLE(1.0G)	210220 003-1	1				
JA - B - 2	NOZZLE HOLDER	210220 003-2	1				
JA-B-3	L TUBING	210220 003-3	1				
JA - B - 4	ELECTRODE (RH)	210220 003-4	1				Include 3-93
JA - B - 5	ELECTRODE (LH)	210220 003-5	1				Include 3-93
JA - B - 6	ELECTRODE RETAINER	210220 003-6	1				
JA - B - 7	ELECTRODE FITTING PLATE	210220 003-7	2				
JA - B - 8	ELECTRODE COVER	210220 003-8	1				→213005-03-11
JA - B - 9	FUEL FILTER COMP.	210210 003-9	1				discontinued, changed to 50204201085
JA - B - 10	FILTER ELEMENT	210210 03-10	1				discontinued, changed to 50204201082
JA - B - 11	FILTER BOWL	210210 03-11	1				
JA - B - 12	FILTER BODY	210210 03-12	1				
JA - B - 15	ELBOW NIPPLE	210210 03-15	1				till 2003/04

JA-B-15A		503052 01003	1			from 2004/05
JA-B-16	FILTER NIPPLE	210210 03-16	1			till 2005/06
JA-B-16A		50306 201010	1			from 2006/07
J A - B - 1 7	FUEL INTAKE TUBING	502802 02009	1			
JA-B-18	PUMP ELBOW	502042 01025	1			
JA-B-19	FUEL PUMP	503222 01002	1			VSGX63 from 2006/07 with air vent valve
JA-B-22	FUEL OUTLET TUBING	502802 02010	1			
JA-B-23	PUMP NOZZLE GROMMET	210220 03-25	1			
JA-B-25	HOUSING	210210 03-25	1			inclde 3-26,3-28,3-30
JA-B-26	HOUSING GRIP	210220 03-28	1			
JA-B-28	HOUSING SEAL (A)	213005 03-65	1			
JA-B-30	HOUSING BRACKET(A)	210210 03-30	2			
J A - B - 3 6	SHORT CIRCUIT JUMPER	502492 03047	→			KBE1JA: 2 pcs till 2004/05, 1pc from 2005/06
JA-B-37	BURNER CONTROLLER	502912 01001	1			till 2004/05, changed to 50321204005
JA-B-37A		503212 04003	1			for 2005/06, changed to 50321204005
JA-B-37B		503212 04005	1			from 2006/07
JA-B-38	FUSE HOLDER	502912 01004	1			
JA-B-39	FUSE HOLDER BRACKET	502912 01018	1			
JA-B-41	FUSE (1.6A)	502912 01006	1			
JA-B-42	CONTROLLER CHASSIS	222150 30015	1			
JA-B-43	PUMP TRANSFORMER BRACKET	213005 03-48	1			
JA-B-45	FACE PLATE	502912 01007	1			till 2005/06
JA-B-45A		503062 01008	1			from 2006/07
JA-B-46	STEP DOWN TRANSFORMER	503002 01005	1			
JA-B-47	FAN MOTOR	503222 01003	1			
JA-B-48&49	FLAME MONITOR & HOLDER	502621 02008	1			till 2005/06
JA-B-50	FLAME MONITOR BRACKET	502042 01021	1			
JA-B-51	IGNITION TRANSFORMER	503122 01004	1			When the trans. till 2005/06 is replaced with one from 2006/07, remove 3-92 Noisefilter assembly.
JA-B-52	INSULATING CAP	502912 01016	2			
JA-B-54	HOUSING END	502802 0200A	1			till 2005/06
JA-B-54A		503062 01006	1			from 2006/07
JA-B-55	HOUSING INNER BRACKET(B)	210210 03-55	2			
JA-B-56	HOUSING SEAL (B)	210220 03-54	1			
JA-B-57	BURNER NECK	210220 03-55	1			
JA-B-58	BURNER CONE	210220 03-56	1			
JA-B-59	STATIONARY BLADE	210220 03-57	1			
JA-B-69	POWER SWITCH	502911 01002	1			
JA-B-71	POWER CABLE	503122 01005	1			till 2005/06, inclde plug & 3-73
		503232 01003	1			from 2006/07 include mold 3P plug, J-07
JA-B-73	CABLE STOPPER	502212 A2028	1			till 2005/06
JA-B-73B		502052 01017	1			from 2006/07 (Dtype)
JA-B-74	BURNER PACKING	502982 01016	1			
JA-B-75	NOZZLE WRENCH	210220 03-68	1			
JA-B-77	WASHER	210220 03-45	2			till 2005/06
JA-B-79	AIR VENT VALVE	210620 03-67	1			
JA-B-80	RETURN TUBING	502912 01013	1			
JA-B-81	RETURN ELBOW CONNECTOR	213005 03-60	1			
JA-B-82	RUBBER CAP	210210 03-82	1			15
JA-B-83	MAINTENANCE KIT	503052 03-83	1			
JA-B-89	O-RING	210210 03-13	1			interchangeable
		502042 01083	1			
J A - B - 9 0	WASHER	213005 003-6	1			
J A - B - 9 2	NOISE FILTER ASSEMBLY	503032 01011	1			till 2005/06
JA-B-93	ELECTRODE NIPPLE	210210 03-93	2			
JA-B-94	NIPPLE FITTING NUT	213005 03-58	1			till 2005/06
JA-B-94A		503062 01011	2			from 2006/07
JA-B-97	BURNER CONTROLLER COVER	222150 30013	1			
J A - B - 9 8	JACK	503062 01002	1			till 2005/06
J A - B - 9 9	FACE PLATE BRACKET	213005 03-72	1			
J A - B - 1 0 1	THERMOSTAT CONNECTOR	503062 01007	1			from 2006/07
J A - B - 1 0 2	CONTROL SUPPORT	502291 04005	4			
VAL-MAT	SHIELDING MAT	50300 205001	1			